



ILE MANUFACTURING LIMITED

FM 40432

Wanlip Road, Syston, Leicester, LE7 1PD

Telephone: 0116 2690900 Fax: 0116 2690939


INSTALLATION/WIRING INSTRUCTIONS FOR THE ILE LCD INDICATOR

Power Supply, Input & Output Specifications

Power supply & input voltage range	=	12 - 24V A.C. or D.C.
Power Supply peak current	=	@12V 230mA, @24V 100mA
Relay 1&2 "N/O volt free contact" specification	=	0.3A@125V A.C. 1A@24V D.C

Wiring

The LCD indicator should be wired as follows:-

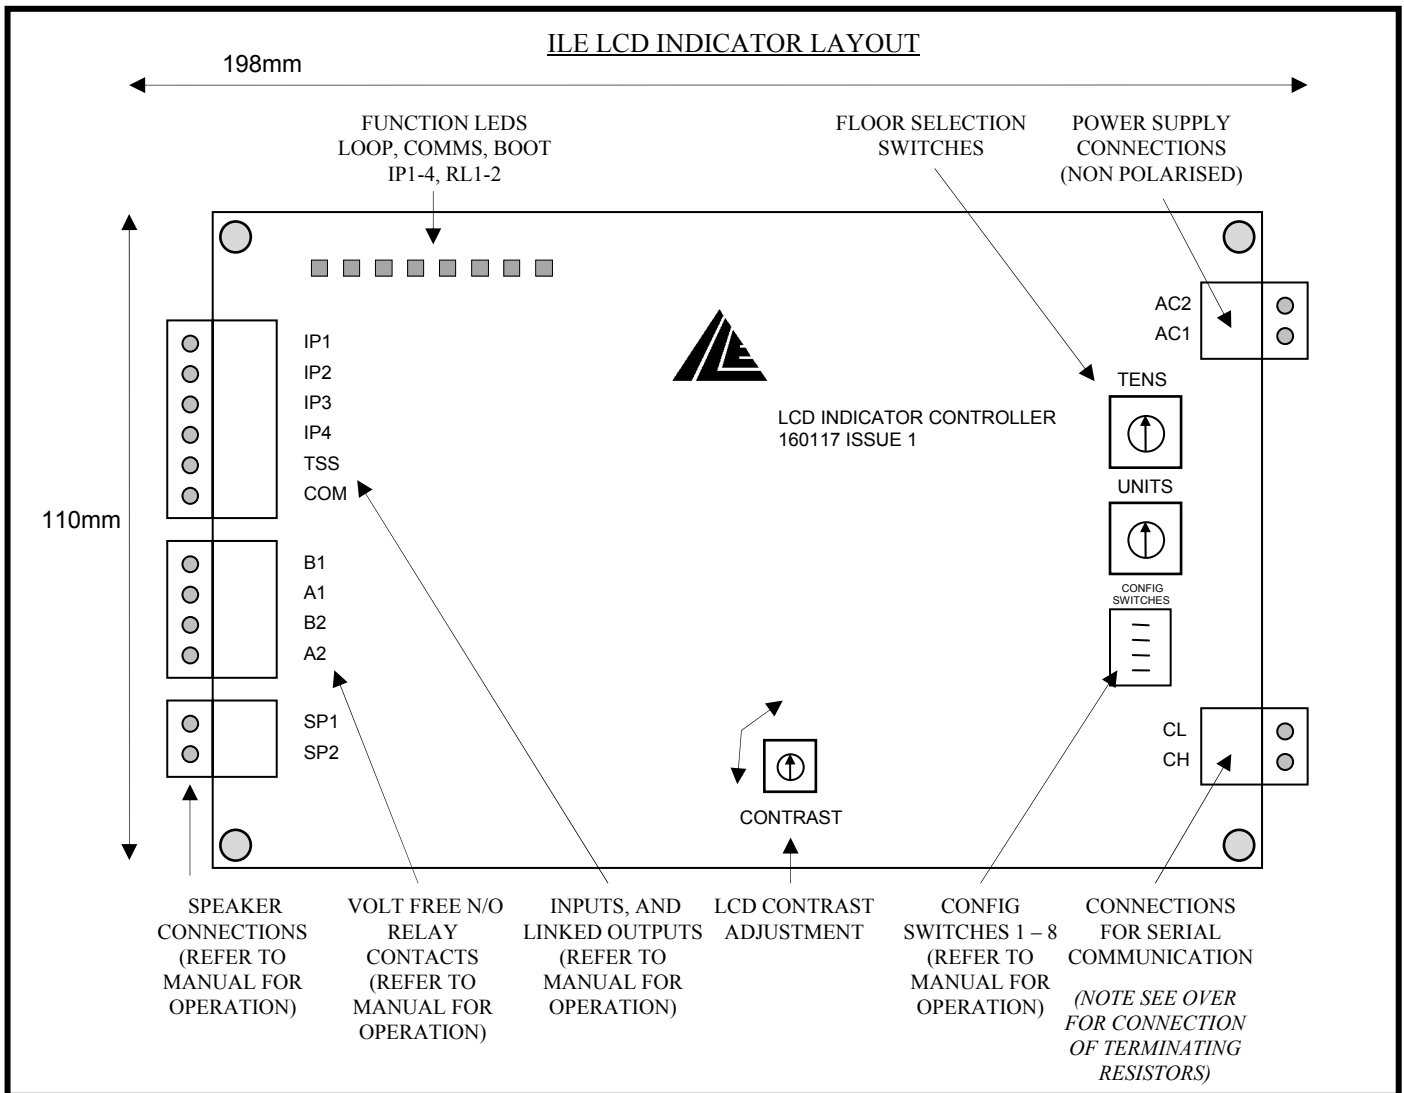

Notes



When fitted in the lift car set the floor position on the main board to "00" using the rotary switches TENS / UNITS. When fitted on the lift landing set switches to floor number, for relay operation at that floor.

For further information regarding the indicator, please refer to the technical manual.

TERMINATING RESISTOR CONNECTIONS

1) Bus incorporating Control unit & landing devices only

When there are no devices in the lift car, the control unit is positioned at the beginning of the bus, therefore one terminator must be placed at the control unit or as close as possible to it. The other terminator must be placed at the other end of the bus, or as close as possible to the last device as shown below (*Fig 1*).

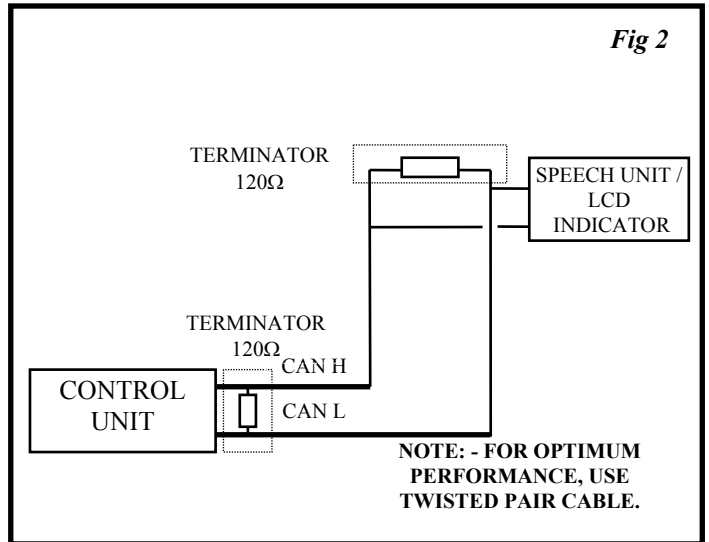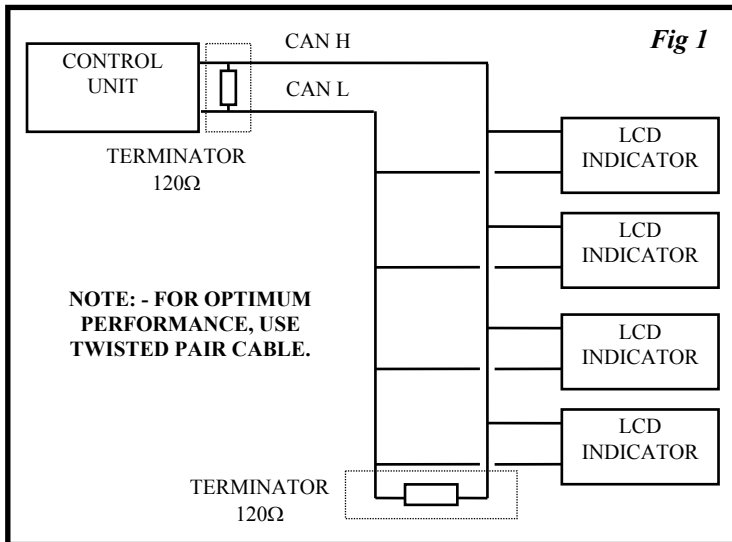

2) Bus incorporating Control unit & lift car device(s) only.

When there are no devices on the lift landing, the control unit is positioned at the beginning of the bus, therefore one terminator must be placed at the control unit or as close as possible to it. The other terminator must be placed at the other end of the bus, or as close as possible to the last device as shown above (*Fig 2*).

3) Bus incorporating Control unit, lift car & landing device(s).

When there are devices on the lift landings and in the lift car, the control unit is positioned in the middle of the bus, therefore the terminators must be placed as close as possible to the last devices as shown below (*Fig 3*).

